



# Ricoh Shotmaster 130Z Film Replacement

How to replace the 35 mm film roll in the Ricoh Shotmaster 130Z.

Written By: anna carolina von einem



## INTRODUCTION

How to replace the 35 mm film roll in the Ricoh Shotmaster 130Z.

---



### PARTS:

- [35mm film of your preference](#) (1)
-



## Step 1 — Film




- Push the switch that says "open" on the side of the camera to gain access to the film compartment

## Step 2



- Unroll part of the film and put the roll on the right side unrolling clockwise

## Step 3

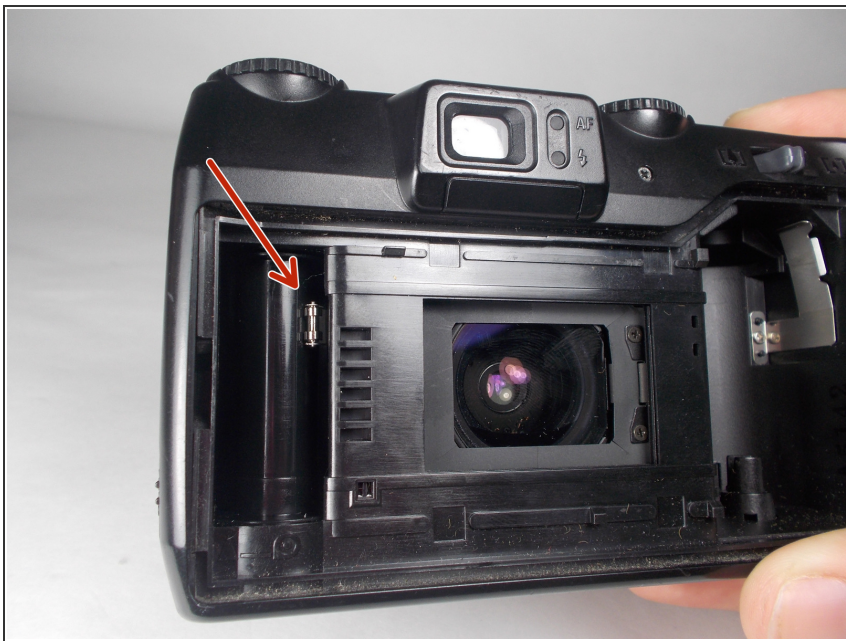

- Then, insert the unrolled part of the film into the slot on the left part of the compartment making sure the silver lever is securing the film.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-30 08:09:55 PM.